

SeNd Technology Ltd

USER MANUAL

GSMOutdoorAlert2

CONTENT

1. General description	4
2. Getting started	5
2.1 Prepare the enclosure	5
2.2 Insert a SIM card	5
2.3 Connect a sensor to the input	6
2.4 Insert the batteries	6
2.5 Enter the program mode	6
2.6 Program at least one telephone number	7
2.7 Switching on/off	8
2.8 Confirmation of the alarm message	8
3. Use of external power supply	9
4. Configuration	10
4.1 Program mode	10
4.2 The (security) code	11
4.3 Programming the settings by SMS	11
4.4 List of SMS commands for configuration	12
5. Possible settings	14
5.1 Phone numbers	14
5.2 Identification text	14
5.3 Alarm texts	15
5.4 SMS on/off	15
5.5 Call on/off	15
5.6 Input type	16
5.7 Exit delay time	16
5.8 Alarm delay time	16
5.9 Inactive time	17
5.10 Alarm repeat time	17
5.11 Power failure delay time	17
5.12 Power failure message	18
5.13 Automatic arming / disarming	18
5.14 Buttonlock	19
5.15 Low power mode	20
5.16 Test message	20
5.17 System reset	20
6. Request list of the status, settings and signal strength	21
7. TeleControlServices Portal	22
8. Technical messages and status feedback	23

Attention! Very important

This user manual contains important guidelines for the installation and usage of the GSMOutdoorAlert2 device as described in this manual. Please read these thoroughly before you start using the GSMOutdoorAlert2 device.

In case of damage caused by disregarding the guidelines, the warranty becomes void. The user must regularly check the proper functioning of the device. The manufacturer cannot be held liable for any damage or loss caused by any incorrect use or incorrect functioning of the GSMOutdoorAlert2 device.

Safety guidelines

- The permitted ambient temperature during operation may not be exceeded (not lower than -10°C and not higher than 50°C).
- The device is intended for use in dry and clean places.
- Protect the device from moisture, heat and water splashing. Not intended for external use.
- The guidelines for the battery usage must be regarded.
- Do not expose the device to strong vibrations.
- Do not let it fall from height.
- Do not use in an environment where any inflammable gases, vapors or dust are present or could be present.
- Repair of the device may only be carried out by people, trained for GSMOutdoorAlert2 repair.
- If the device must be repaired, only original replacement components may be used. The use of different parts may lead to damage of the GSMOutdoorAlert2 device.

Use in accordance with the regulations

The purpose of this device in accordance with the regulations is sending SMS text messages and making telephone calls after an alarm situation. Other uses are not permitted and may invalidate the warranty.

Battery recycling

CR123 batteries, as used in the GSMOutdoorAlert2 device, are classified as non-hazardous waste and can be recycled. Please take empty batteries to a nearest collection point.

1. GENERAL DESCRIPTION

The GSMOutdoorAlert2 is a battery operated GSM module used to send an alarm notification after a triggered input or - if an external power supply is used- after a power failure.

The factory settings of the GSMOutdoorAlert2 cause following reactions:

- When one of the inputs is activated by a sensor, the GSMOutdoorAlert2 sends an alarm SMS text message and calls the phone numbers programmed in by the user.
- When one of the inputs remain in the alarm status, the GSMOutdoorAlert2 repeats sending the SMS alarm message every four hours.
- When the batteries need to be replaced, the GSMOutdoorAlert2 sends a 'low battery' SMS text message to the first telephone number (administrator).
- When an external power supply is used and a power failure occurs, the GSMOutdoorAlert2 sends a 'power failure' SMS text message to the first telephone number. When the power is restored, the GSMOutdoorAlert2 sends a 'power restored' SMS text message.

The GSMOutdoorAlert2 has many options to influence the behaviour, which are described in chapter 4. For additional alarm and monitoring functions the GSMOutdoorAlert2 can be connected to the TeleControlServices Portal, which is explained in chapter 7.

2. GETTING STARTED

To get started with the GSMOutdoorAlert2, at least the following steps need to be taken in the following order:

1. Prepare the enclosure
2. Insert a SIM card
3. Connect a sensor to the input
4. Insert the batteries
5. Enter the program mode
6. Program at least one telephone number
7. Arming/disarming the system

These steps are further explained in this chapter.

2.1 PREPARE THE ENCLOSURE

To open the enclosure, the screws just need to be turned a bit. Press the screw slightly while you are unscrewing. Do not use an electrical screwdriver.

The enclosure has three swivels. If you need only one or two, change the other swivels by the supplied blanking plug. Reuse the ring at the inner side.

2.2 INSERT A SIM CARD

Insert a SIM card into the module. Push the black cover slightly outward to open the holder. Before installing the SIM card should have PIN code "0000", or PIN code removed.

(A PIN code can be changed or removed by putting the SIM card in to any mobile phone and entering the 'security' menu.)

NB: Make sure the SIM card is inserted before the batteries are inserted. If you replace a SIM card, first remove the batteries (and remove any other external power supply). The settings are stored in the device memory. The SIM card shall have the "normal" size and be suitable for 2G. It is advised to use an M2M SIM card.


2.3 CONNECT A SENSOR TO THE INPUT

Two external sensors can be connected to the inputs. As a standard reaction after a triggered input, the GSMOutdoorAlert2 sends an SMS text message to the preset numbers and calls these numbers.

Insert the 2 wires of an external sensor through the hole in the enclosure and insert them in the two connectors of input 1 (press on the green pins for connecting the wires). It does not matter which wire is connected to which connector.

A second sensor can be connected to input 2.

As default the inputs are programmed as Normally Open (NO) contacts. This means the inputs are triggered if the input is closed for at least 1 second. In case the contact is Normally Closed (NC), please refer to paragraph 5.4. If you require the sensor to be activated for a shorter or longer period before triggering an alarm, please refer to 5.7.

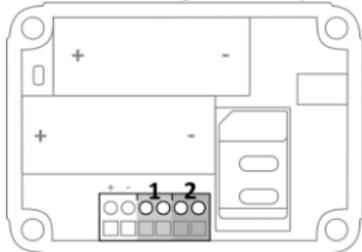

2.4 INSERT THE BATTERIES

Insert the two batteries (CR123) in the module. Use the +/- indication for the correct placement.

2.5 ENTER THE PROGRAM MODE

Directly after inserting the batteries, the GSMOutdoorAlert2 switches to the program mode. First the GSM module establishes network connection. During this time the LED flashes green and red. Within 10-30 seconds the connection is established and the status LED starts flashing 1 sec. on/1 sec. off (or stays on continuously in case the first telephone number has been configured).

The GSMOutdoorAlert2 returns to the program mode by pressing the on/off button for 5 seconds, until the LED starts flashing red/green. Once it has GSM connection it will be flashing again (or stays on continuously).

As long as the unit is in program mode, the status green LED is on (or flashing 1 sec. on/1 sec. off if the module has no configuration). During the first 3 minutes, the GSM module remains active, ready to receive SMS commands. After 3 minutes a time-out occurs and the GSM module switches off in order to save the batteries. The unit returns to the low power operational mode.

2.6 PROGRAM AT LEAST ONE TELEPHONE NUMBER

The GSMOutdoorAlert2 is able to send messages up to 5 telephone numbers. The first telephone number (TEL1) belongs to the administrator. Technical messages (such as *battery low*) are sent to the administrator only. Without the administrators' phone number, the GSMOutdoorAlert2 cannot function.

When the GSMOutdoorAlert2 is in initial (factory) status and the batteries are inserted (so the LED is flashing), the administrators' number is programmed by calling the telephone number of the GSMOutdoorAlert2 using the administrators' phone. The unit will recognize this number and store it as administrator (TEL1). The administrator will receive a confirmation SMS text message including the security code. This code is needed to program the other settings in the unit.

NB: For this way of programming the number recognition in the administrator's phone must be 'on'. To program or change the administrators' number by SMS command, please refer to 4.2.

2.7 SWITCHING ON/OFF

After the previous steps, the GSMOutdoorAlert2 is ready for use. It is armed (switched on) automatically.

In order to switch off (disarm) the GSMOutdoorAlert2:

- Press the on/ off button at the upper side for 1 second. The green LED switches off to indicate the disarmed status.

In the disarmed status the GSMOutdoorAlert2 will not send alarm notifications. The functions automatic arming and sending a 'low battery' message, are still active.

In order to switch on (arm) the GSMOutdoorAlert2:

- Press the on/ off button at the upper side for 1 second. The green LED blinks once every 3 seconds (battery-powered) or stays 'on' continuously (in case of an external power supply).

If powered externally (GSM is open), switching can be done via SMS commands:

SMS command to switch on:	CODE ARM
SMS command to switch off:	CODE DISARM
example:	1111 ARM

The status can be requested via SMS command CODE STATUS? (see chapter 6).

2.8 CONFIRMATION OF THE ALARM MESSAGE

When the system is triggered it will send alarm notifications. First an SMS text message is sent to all programmed alarm numbers, followed by a phone call. When you pick up the phone, you will hear beeps. It is possible to confirm the phone call by answering the phone and pressing any key. The other alarm numbers will not be called afterwards. This works for most telephones.


By switching off the 'SMS' function, the system will only call. This prevents the other numbers being notified by SMS.

3. USE OF EXTERNAL POWER SUPPLY

Although the GSMOutdoorAlert2 is designed to run on batteries, it is possible to use an external power supply. In this mode the module is always connected with the GSM network and therefore always in program mode. When the power fails, the batteries take over and a power failure alarm message is sent. The module continues operating albeit in the low power mode. This means the GSM module switches off and only establishes network connection when it needs to send an alarm notification, test message or low battery alert.

Connect the external power adapter (or any other regulated 12VDC power supply) to the power input of the connector (press on the green pins to connect the wires):

- V+ (black lead with white stripe) to “+”
- Ground (black lead) to “-”

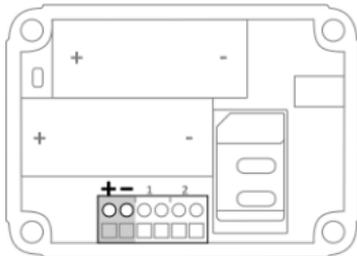

4. CONFIGURATION

To program the GSMOutdoorAlert2, the GSM module must have network connection. In case only batteries are used, first switch the unit to the program mode. Next send SMS commands for the configuration. All settings are stored and will be kept in the unit, even in case the power supplies are removed.

4.1 PROGRAM MODE

If the unit is connected to an external power supply, the GSMOutdoorAlert2 has continuous network connection and the unit is permanently in program mode.

If the unit is battery-powered the program mode can be achieved by pressing the on/off button for 5 seconds, until the LED starts flashing red and green. Alternatively, the program mode can be accessed by (re) inserting the batteries.

First the GSM module establishes network connection. During this time the LED flashes green/red. Normally this takes 10-30 seconds. Once the connection is established the status LED starts flashing 1 sec. on/1 sec. off (or stays on continuously in case the first telephone number has been configured).

In program mode, the device is ready to receive SMS commands. If no correct command is received for 3 minutes, the GSM module switches off in order to save the batteries. The unit returns to the low power operational mode.

The program mode is interrupted by pressing the on/off button for one second until the LED switches off. The unit is switched off completely (disarmed).

4.2 THE (SECURITY) CODE

For configuration activities the (security) code of the GSMOutdoorAlert2 must be used. The initial (security) code is '1111'. You can change the (security) code to your own code. See section 4.4.

4.3 PROGRAMMING THE SETTINGS BY SMS

To program the settings by SMS text message:

1. Make sure the GSMOutdoorAlert2 is in program mode (please refer to 4.1).
2. Send an SMS text message with the (security) code and the command.
3. The green LED blinks 3 times to indicate the successful configuration. In case of an incorrect command, the red LED flashes 5 times.

SMS messages have the following content: **CODE COMMAND:OPTION**

- Do not forget the space character between (security) code and command.
- The commands are case insensitive.
- Several commands may be combined in one SMS message (with a maximum of 160 characters) by placing a # between the commands.

CODE COMMAND:OPTION#COMMAND:OPTION#COMMAND:OPTION

See section 4.4 for a full list of SMS commands.
--

4.4 LIST OF SMS COMMANDS FOR CONFIGURATION

The setting options for the GSMOutdoorAlert2. The commands are case insensitive.

Setting	SMS Command	Options	Default value
Change security code	INSTCODE:	0000...9999	1111
Set telephone number for alarm messages	TEL1: ... TEL5:		Empty
Delete telephone number	DEL1 ... DEL5		
Identification text	NAME:	20 characters	Alarm messenger
Call on/off	CALL:	ON, OFF	ON
SMS on/off	SMS:	ON, OFF	ON
Input type input 1	TYPEIN1:	NO, NC	NO
Input type input 2	TYPEIN2:	NO, NC	NO
Exit delay	DELAYEXIT:	0...999 (sec)	0
Delay on input 1	DELAY1:	0...999 (sec)	1
Delay on input 2	DELAY2:	0...999 (sec)	1
Inactive time input 1	INACTIVEIN1:	0...60 (min)	0
Inactive time input 2	INACTIVEIN2:	0...60 (min)	0
Alarm repeat time	REPEAT:	0...24 (hrs)	4
Alarm text input 1	TEXT1:	20 characters	Alarm 1
Alarm text input 2	TEXT2:	20 characters	Alarm 2
Power failure delay time	DELAYPOW:	0...999 (min)	0
Power message	POWERMESSAGE:	OFF,ALERT,ALARM	ALERT
Actual time	TIME:	hhmm	Empty
Actual date	DATE:	yyyymmdd	Empty
Arming time	TIMEARM1:	hhmm	Empty
Disarming time	TIMEDISARM1:	hhmm	Empty
2 nd arming time	TIMEARM2:	hhmm	Empty
2 nd disarming time	TIMEDISARM2:	hhmm	Empty
Assigning times 1	DAYS1:	1234567	Empty

Setting	SMS Command	Options	Default value
Assigning times 2	DAYS2:	1234567	Empty
Use of on/off button	BUTTONLOCK:	ON (button locked) OFF (unlocked)	OFF
Low power status	LOWPOWER:	ON, OFF	OFF
Interval 'test SMS'	TEST:	0...30 (days)	0
Time test message	TESTTIME:	hhmm	

Examples:

Set phone number 1: 1111 TEL1:0712345678

Delete phone number 1: 1111 del1

Be aware of the space between "1111" and the command.

5. POSSIBLE SETTINGS

5.1 PHONE NUMBERS

The GSMOutdoorAlert2 is able to send alarm messages to up to 5 phone numbers. The first telephone number (TEL1) belongs to the administrator. Only this number receives all system messages. The other phone numbers (including the administrator) only get the alarm messages.

To set or change telephone numbers:

SMS command 1st telephone number:

example:

TEL1:

1111 TEL1:07123456789

... similar for TEL2:, TEL3:, TEL4: and TEL5:

For foreign numbers, start with + followed by the country code (depending on the country leave out the zero for the local area code).

example:

1111 TEL1:+447123456789

To delete telephone numbers:

SMS command delete 1st telephone number: **DEL1**

example: 1111 DEL1

... similar for DEL2, DEL3, DEL4 and DEL5

5.2 IDENTIFICATION TEXT

It is possible to add a standard identification text (NAME) to all messages sent out by the GSMOutdoorAlert2. The alarm messages are a combination of the name and the alarm text. A user defined identification has a length of maximum 20 characters. The default identification text is 'Alarm messenger'.

SMS command identification text:

example:

NAME:

1111 NAME:my alarm device

5.3 ALARM TEXTS

Unique alarm texts can be programmed into the GSMOutdoorAlert2. User defined texts have a maximum length of 20 characters.

Following default texts are programmed:

Text 1 (input 1):	Alarm 1
Text 2 (input 2):	Alarm 2
Text 3:	Power failure
Text 4:	Power restored

NB: text 3 and 4 are only valid at POWERMESSAGE set to 'ALARM'.

SMS command text input 1	TEXT1:
SMS command text input 2:	TEXT2:
SMS command text <i>Power failure</i> :	TEXT3:
SMS command text <i>Power restored</i> :	TEXT4:
example:	1111 TEXT2:garage door open

5.4 SMS ON/OFF

By default, the GSMOutdoorAlert2 sends alarm notifications via text message and calls (you will hear a beep signal) to the preset contact persons. By turning off the SMS, the unit will only call after a triggered input.

SMS command enable / disable SMS: **SMS:ON** or **SMS:OFF**
example: 1111 SMS:OFF

5.5 CALL ON/OFF

By default, the GSMOutdoorAlert2 sends alarm notifications via text message and calls the preset contact persons. By turning off the CALL, the unit will only send an SMS text message as alarm notification. It is not possible to switch off both the SMS and the call.

SMS command enable / disable call: **CALL:ON** or **CALL:OFF**
example: 1111 CALL:ON

5.6 INPUT TYPE

The input type defines the character of the inputs IN1 and IN2. This can be Normally Open (NO) or Normally Closed (NC). If an input is set to NO, the alarm will be triggered as soon as the terminals of the input are closed. If the input is set to NC, the alarm is triggered when the connection between the input terminals is broken. The default input type is set to NO.

SMS command input type input 1: **TYPEIN1:NO** or **TYPEIN1:NC**
SMS command input type input 2: **TYPEIN2:NO** or **TYPEIN2:NC**
example: 1111 TYPEIN1:NC

5.7 EXIT DELAY TIME

The exit delay time defines the time between the moment of switching on the module – while the input is active – and the moment the module starts sending the first alarm message. Example: the module has been installed in a cabinet where a door magnet contact is connected to the input. The exit delay time is the time between switching on the module and closing the cabinet's door. Only after this time has exceeded, alarm messages will be sent. The time can be set between 0 and 999 seconds. As default, the exit delay time is set to 0 second.

SMS command exit delay: **DELAYEXIT:**
example: 1111 DELAYEXIT:806

5.8 ALARM DELAY TIME

The input delay time defines the time that the input is triggered before an alarm is initiated. If the input returns to the non-alarm status within the delay time, no alarm is sent. The time can be set between 0 and 999 seconds. As default, the input delay time is set to 1 second.

SMS command alarm delay input 1: **DELAY1:**
SMS command alarm delay input 2: **DELAY2:**
example: 1111 DELAY1:999

5.9 INACTIVE TIME

The “inactive time” defines the time an input is not active after an activation. During the inactive time, no new alarm message will be sent. Only when the input returned to the non-alarm status, gets activated again and remains active, an alarm will be sent yet after the inactive time. If the time is set to “0” (minutes), the input will be active again immediately after returning to the non-alarm status. The time can be set between 0 and 60 minutes. As default, the inactive time is set to “0”.

SMS command inactive time input 1: **INACTIVEIN1:**
SMS command inactive time input 2: **INACTIVEIN2:**
example: 1111 INACTIVEIN2:45

5.10 ALARM REPEAT TIME

In order to emphasize the urgency of the alarm messages, all alarms can be repeated. As long as the input has not returned to the inactive status, the SMS alarm will be repeated after the ‘alarm repeat time’. The time can be set between 0 and 24 hours. As default the alarm repeat time is set to 4 hours.

SMS command alarm repeat time: **REPEAT:**
example: 1111 REPEAT:20

5.11 POWER FAILURE DELAY TIME

If the GSMOutdoorAlert2 is powered externally and the power fails it can notify the contact person(s). The power failure delay time defines the time between the initial power failure and the alarm notification. If the power is restored within the delay time, no alarm is sent. The time can be set between 0 and 999 minutes. As default, the delay time is set to 0.

SMS command power failure delay time: **DELAYPOW:**
example: 1111 DELAYPOW:15

5.12 POWER FAILURE MESSAGE

If the GSMOutdoorAlert2 is powered externally and the power fails it sends an SMS text message to the administrator (setting: 'ALERT'). The message is only sent in case the unit is armed. This message can be set to 'ALARM' or 'OFF'. If the setting is 'ALARM' the power failure message will be sent to all contact persons (SMS and or CALL, following the SMS on/off and CALL on/off settings). The setting 'OFF' means that no power failure message is sent. The default setting for the 'power failure message' is set to "ALERT".

SMS command power failure message: **POWERMESSAGE:ALARM**
(or **ALERT** or **OFF**)
example: 1111 POWERMESSAGE:ALARM

5.13 AUTOMATIC ARMING / DISARMING

The GSMOutdoorAlert2 only works if the unit is armed, which is done via the on/off button. It is possible to automatically arm and disarm the unit, based on an arming and/or disarming time scheme. Two schemes can be entered, which can be assigned to the days in the week (e.g. to have a different weekend scheme).

For arming/disarming automatically, the internal clock time needs to be correct. Some telecom providers offer this in the network, which the GSMOutdoorAlert2 synchronizes during start-up and after sending test messages. It is possible to set the time manually. To view the clock time, request a list of the settings by sending the command 1111 SET?.

To set the actual date:

SMS command actual date: **DATE:**

To set the actual time:

SMS command actual time: **TIME:**

To set a daily arming scheme:

SMS command arming scheme 1: **TIMEARM1:**

To set a daily disarming scheme:

SMS command disarming scheme 1: **TIMEDISARM1:**

To set a second daily arming scheme:

SMS command arming scheme 2: **TIMEARM2:**

To set a second daily disarming scheme:

SMS command disarming scheme 2: **TIMEDISARM2:**

example: 1111 TIMEDISARM2:1455

As default the automatic (dis) arming times are valid for all days. It is possible to assign them to a few days in the week. In this way it is possible to have two different schemes, which are valid on different days.

To assign TIMEARM and/or TIMEDISARM to weekdays:

SMS command to assign 'scheme 1': **DAYS1:**

SMS command to assign 'scheme 2': **DAYS2:**

As value the weekdays can be entered. Monday is 1, Tuesday is 2, etc. If the scheme is valid for several days, the days can be entered in one command (e.g. 12345 means Monday till Friday).

examples: 1111 DAYS1:12345
1111 DAYS2:67

5.14 BUTTONLOCK

It can be useful to lock the on/off button to prevent the unit from being switched off unintentionally. As default the buttonlock is unlocked (so, the button is enabled). To disable the button, the buttonlock needs to be switched to on.

SMS command buttonlock:

BUTTONLOCK:

example:

1111 BUTTONLOCK:ON

5.15 LOW POWER MODE

A battery-powered GSMOutdoorAlert2 has the GSM module switched off in stand-by mode. It only switches on if it has to send a message. An externally powered unit always keeps the GSM module open (as factory default). When using the “low power mode” an externally powered unit will also keep the GSM module closed as much as possible, to minimize the power consumption. To achieve this, the LOWPOWER shall be set to ON. In the low power mode, the presence of the external power source will still be monitored.

SMS command low power mode: **LOWPOWER:**
 example: 1111 LOWPOWER:ON

5.16 TEST MESSAGE

The GSMOutdoorAlert2 can send regular test SMS messages (*keep alive*) to the administrator (first phone number), to ensure the proper functioning of the unit. The test message function is only active if the unit is armed. The timing of the test message is determined by the time of programming. The test time can also be programmed. The interval between the test messages can be set between 0 days (no test message) and 30 days. The default test interval is set to 0 (no test message).

SMS command interval test message: **TEST:**
 example: 1111 TEST:21

5.17 SYSTEM RESET

To reset the GSMOutdoorAlert2 to its factory settings:

1. Remove the batteries (and external power supply).
2. Press the outside button while reinserting the batteries. Keep it pressed for (about) another 5 seconds.
3. Release the button immediately after the LED starts to flash.
4. If relevant, connect the external power supply.

After a successful reset, the status LED on the keypad will blink green to indicate that the module is not configured. The security code is back to factory settings as well.

6. REQUEST LIST OF THE STATUS, SETTINGS AND SIGNAL STRENGTH

Several lists and status reports can be retrieved by sending an SMS text message to the GSMOutdoorAlert2, from any telephone. Before sending the request, make sure the unit is in the program mode (please refer to 4.1).

Upon sending the command, the GSMOutdoorAlert2 returns an SMS text message to the originator of the request. The commands are case insensitive.

STATUS REQUEST

The status can be requested by sending following SMS text message. The status includes the armed/disarmed status, status of the inputs, power and batteries.

SMS command status request: **STATUS?**
 example: 1111 STATUS?

LIST OF SETTINGS

The settings can be requested by sending following SMS text message:

SMS command list basic settings: **SET?**
SMS command list advanced settings: **SETA?**
SMS command list of texts: **TEXT?**
 example: 1111 SET?

LIST OF PHONE NUMBERS

The list of telephone numbers can be requested by sending following SMS text message:

SMS command list of phone numbers: **CALL?**
 example: 1111 CALL?

GSM SIGNAL STRENGTH

The signal strength of the used mobile network can be requested. If the network is weak, it is advised to use a SIM card of another network provider or an external GSM antenna (accessory). The GSM signal strength can be requested by sending following SMS text message:

SMS command request GSM signal: **NETWORK?**
 example: 1111 NETWORK?

7. TELECONTROLSERVICES PORTAL

The GSMOutdoorAlert2 sends GSM messages to the preset contact persons. It is also possible to connect the system to the TeleControlServices Portal. In this secured internet environment the GSMOutdoorAlert2 system(s) can be administered.

The portal offers various functions:

- 1) the portal forwards alarm messages to contact persons (SMS and/or mail), which are set in the portal. The receivers of alarm messages may be different from the receivers of technical messages. Alarm phone calls will still be done directly from the GSMOutdoorAlert2.
- 2) the name and location can be set in the portal. This name is used in SMS and mail messages.
- 3) the device settings can be programmed through the internet portal or via SMS command.
- 4) once connected to the internet portal, test messages (*'keep alive'*) will be sent regardless the armed or disarmed state. The portal will check the receipt of test messages (*'keep alive'*); when the message was not received on time, it sends an exception message.

8. TECHNICAL MESSAGES AND STATUS FEEDBACK

Technical messages

In the event of technical issues the administrator receives an SMS message. Possible technical messages are:

Message	Reason
Low batteries, external power supply OK	Power is available, batteries need to be replaced.
No external power supply, batteries OK	No external power supply, batteries are able to take over operation in low power mode.
Low batteries, no external power supply	No external power supply, batteries need to be replaced.
External power supply OK, batteries OK	The external power is restored (or the adapter is plugged in a socket), batteries do not need to be replaced.
(delayed message)	If (delayed message) is added to the SMS text messages, the message couldn't be sent earlier, due to a SIM card failure or GSM network failure.
Batteries too low. Module shutting down.	The module has shut down due to low voltage. Replace the batteries or connect the power supply to restart the
Module restarted. Power supply [status]. Batteries [status].	The module has been able to restart after a shutdown.

When receiving one of the above mentioned technical messages, please take appropriate action as soon as possible. During the battery replacement, the SIM card does not have to be removed.

Status feedback

LED pattern	Status	Required action
Blinking green, 1 second on / 1 second off	Module not configured	Configure at least one telephone number.
1 green flash every 3 seconds	Module is switched on, powered by batteries	No action required.
Green LED stays on continuously	Module is switched on, powered by an external source	No action required.
Flashing red/ green every second	Module establishes network connection	Wait until the network connection is established.
2 flashes red, every 3 seconds	No GSM connection	Try the SIM card in any mobile telephone; replace SIM card using other telecom provider; try the module at another location.
3 flashes red, every 3 seconds	No valid SIM card or wrong PIN	Try the SIM card in any mobile telephone; remove PIN code; check credit; replace SIM card.
Blinking 3 times green	Successful programming action	No action required.
Blinking 5 times red	Faulty programming action	Check SMS command.
4 red flashes every 3 seconds	Low batteries	Replace both batteries.

Technical specifications

GSM	:	Quad band EGSM, 850/900/1800/1900 MHz
Batteries	:	2* CR123 (lithium) recommended: Varta, Panasonic and Energizer (please do not use Duracell or Philips)
Battery life in normal mode	:	>1 year (battery operated) >2 years (external power supply)
Ext. power connection	:	12 VDC (+/- 2 VDC) / min. 500 mA (optional)
Power consumption low power	:	ca. 50 μ A stand-by / max. ca. 500 mA
Power consumption 12V	:	ca. 50 mA stand-by / max. ca. 500 mA
Dimensions	:	162 x 82 x 55 mm
Ambient temperature	:	-10 °C until +50 °C

This manual is published for SeNd
Technology Ltd.

All rights, the translation included are reserved. Any reproduction, either photocopy, microfilm or saved in an automated data dictionary, only after written approval of the Publisher. Reprinting, even in summary, is prohibited.

This user manual meets the technical requirements at the moment of printing. Changes in technology and equipment are reserved.

© Copyright 2019
version GSMOutdoorAlert2-190301



Declaration of Conformity

I/We, the undersigned, declare that the
Bosch Safety Services (BSS) company models
and the device(s)
Mobile-Alert, ASD2

are in compliance with the essential requirements of the following European standards: CE Directives:

Directive 76/211/EEC (low voltage directive)
Directive 89/313/EEC (Electromagnetic compatibility)
Directive 2014/53/EU (RED)

The conformity with the essential requirements set out in Art 3 of the 2014/53/EU has been demonstrated against the following technical standards:

EN 60950-1:2006 + A11:2009 + A1:2010 + A12:2011 + A2:2013
EN 62211:2009
EN 60332-1:2002 + A1:2013, EN 60332-2:2002 + A1:2013
EN 60331-1:2012

Bosch Safety Services
Product Manager
T114 DE - Allergemündchen
DE-Wehrheim

Name: Jack van de Vliet
Position: General Manager
Signature:

Date: 1 February 2019

